


SLIDER SCREEN:


- From within the residence, open the slider completely and direct the tension springs toward the center of the window frame.
- Insert the screen into the opening and compress the side of the screen with the tension springs using one hand.
- With the other hand, hold one of the pull tabs and pull (for 6000 series) or push (for 8000 series) the opposite side of the screen into place. Repeat for the other tab.

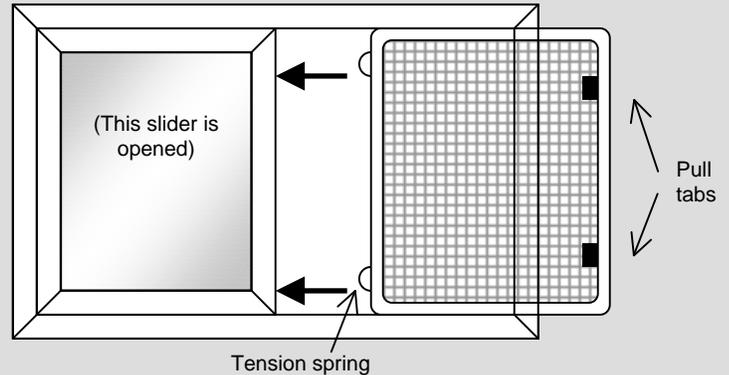


Removal: Compress the side with the tension springs and push (for 6000 series) or pull (for 8000 series) each pull tab. Remove the screen.

CASEMENT WICKET SCREEN:

- Place screen onto opening ensuring the screen is seated correctly. Use a #1 Robertson screwdriver and the hardware provided (swivel clips & screws).
- When attaching the swivel clips, ensure that the tube portion of the clip goes towards the window frame, and that the lip portion is away from the window frame (see graphic below). Do not over-tighten the screw, otherwise the clip may not swivel freely for easy screen removal.

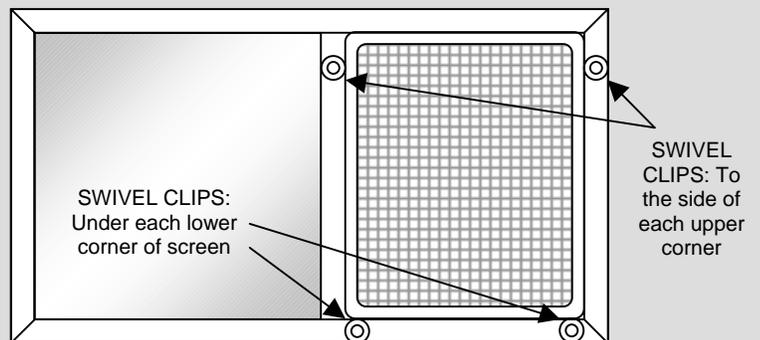

Side-view of SWIVEL CLIP

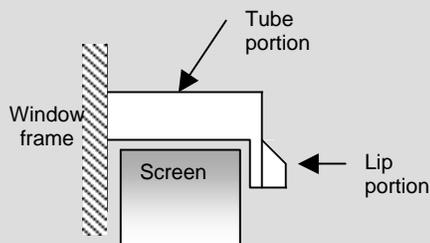

Removal: Turn each clip so its lip is facing away from the screen and is no longer holding the screen frame. Remove the screen.

PATIO DOOR SCREEN:

- Turn the adjusting screws until all four rollers are protruding from the frame approx. 1/4".
- Start by installing the screen in the center of the patio door. Slip the top of the door up into the upper channel and push in the bottom.
- Don't force the lower rollers onto the bottom track. Use a flat screwdriver to gently pry them over and onto their track.
- Then adjust the lower rollers by turning the screws in or backing them out to raise or lower the door. Adjust until the door slides easily on the track.

