

Lubrication of Hinge



- 1. Remove the black plastic cover cap.
- 2. Apply graphite lubricant. Ensure to wipe off excess lubricant, if required.
- 3. Reinstall the black plastic cover cap.

Lubrication of Mortise Lock Hardware



- 1. Open the door
- 2. Turn the thumb turn in order to rotate the dead bolt into its locked position
- 3. Apply graphite lubricant. Ensure to wipe off excess lubricant, if required.



- 1. Open the door and hold the handle.
- 2. Apply graphite lubricant. Ensure to wipe off excess lubricant, if required.